

INSTALLATION OF STEERING HANDLE (STEP1)

S/N	Description	Quantity	Specification	Remark
①	Front Fender	1		
②	Six Flange Bolt M6X12	2	M6X12	
③	Tapping Screw	4	ST4.2X16	
④	Clip	4		
⑤	Six Flange Nut M6	2	M6	
⑥	Bracket, FR. Fender	1		
⑦	Steering stem	1		
⑧	Rear Body Front Fender	1		

1. Fasten ① on ⑦ through ⑥ and ②.
2. Fasten ① on ⑧ through ⑤ and ③.
3. Clip ④ on ①, then connect ① and ⑧ by ③.



INSTALLATION OF STEERING HANDLE (STEP2)

S/N	Description	Quantity	Specification	Remark
①	Front Axle	1	M12X220	
②	Bush of Front Axle	1	∅12X ∅20X24	
③	Nut	1	M14	
④	Front Wheel	1		
⑤	Tachometer Assy	1		
⑥	Front Shock	2		

1. Put ④ above on ⑤ and ⑥.
2. Then put ④ at the middle of ⑥.
3. Go through ① from the middle of ⑤, ④, ②, and fasten ③.



INSTALLATION OF STEERING HANDLE (STEP3)

S/N	Description	Quantity	Specification	Remark
①	Steering handle	1	M12X220	
②	Steering Stem	1	∅12X ∅20X24	
③	Hex Flange Bolt M14	1	M14	
④	Steering handle lock sleeve	1		
⑤	Nut	1		
⑥	Bandage	2		
⑦	Cable	1		

1. Put ① into ②.
2. Put ④ into ①, then go through ③ from the middle of ①, ②, and fasten ⑤.
3. Connect ⑦ and ⑥ by ⑥.



INSTALLATION OF STEERING HANDLE (STEP4)

S/N	Description	Quantity	Specification	Remark
①	Hood Front	1		
②	Screw	1	M6X12 (dk=12)	
③	Tapping Screw	1	ST4.2X16	
④	Clip	1		
⑤	Tapping Screw	1	ST4.8X16	
⑥	Tool Box	1		

1. Put ④ into ①.
2. Fastening ① on ⑥ by ③ and ⑤, then put on ②.



INSTALLATION OF STEERING HANDLE (STEP5)

S/N	Description	Quantity	Specification	Remark
①	Luggage Carrier	1		
②	Hex Flange Bolt	4	M8X30	
③	Frame	1		

1. Fastening ② on ③ by ①.




INSTALLATION OF STEERING HANDLE (STEP6)

S/N	Description	Quantity	Specification	Remark
①	L/R.RR. mirror	2		In sundries box
②	Location, L/R.RR. mirror	1		On motorcycle

INSTALL STEP:

1. Install ① on ② with screw (together with ①) respectively.
- ATTENTION: Take care of the RIGHT and LEFT.
Before fastening, adjusting the point view of the mirror

INSTALLATION OF BATTERY (STEP 7)

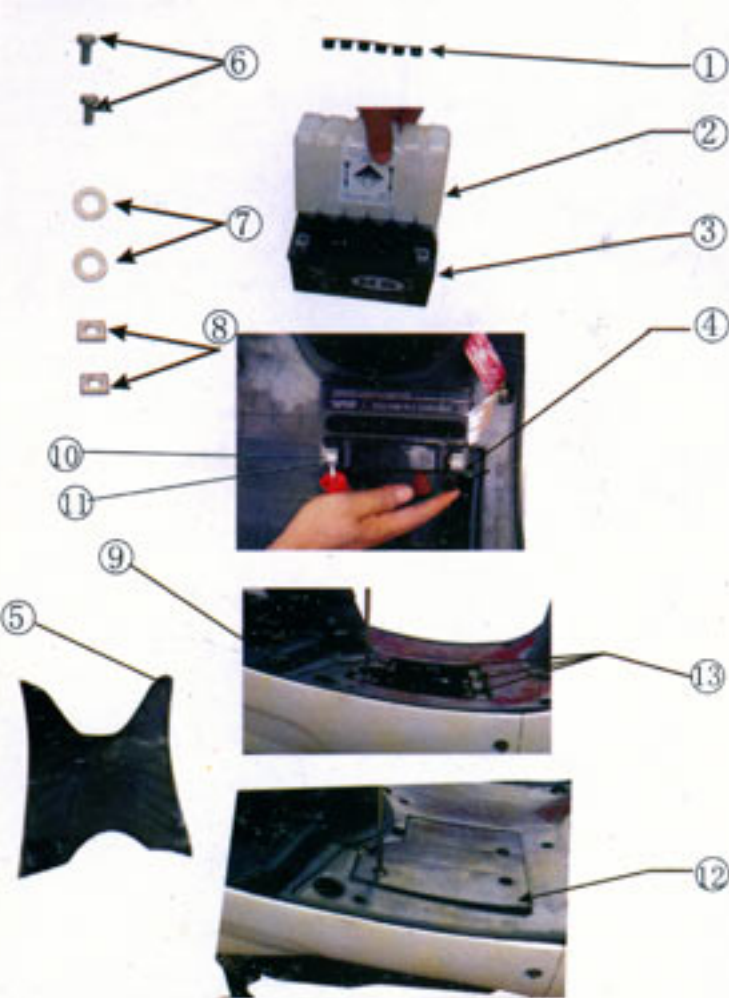

S/N	Description	Quant	Specification	Remark
①	Sealed strip	1		In battery box
②	Electrolyte	1		In battery box
③	Battery	1		In battery box
④	Wire, earth	1		On motorcycle
⑤	Footrest carpet	1		On motorcycle
⑥	Bolt	2	M6X12	In battery box
⑦	Gasket	2	∅6	In battery box
⑧	Washer	2	M6	In battery box
⑨	Body	1		
⑩	Wire, motor	1		On motorcycle
⑪	Wire, power	1		On motorcycle
⑫	Battery cover	1		On motorcycle
⑬	Bolt	2	ST4.8X16	On motorcycle

INSTALL STEP:

1, Fill ② into ③ refer to the instruction of battery, close down the battery with ①.

2, Take down ⑤ from ⑨, take down ⑫ from ⑨ by loose ⑬.

3, Connect ⑩ and ⑪ on the anode of ③ with ⑥, ⑦ and ⑧, connect ④ on the cathode of ③ with ⑥, ⑦ and ⑧.

ATTENTION: ⑦ must be put above on the anode and cathode, ⑧ must put inside the anode and cathode.

4, Put ③ into ⑨'s slot

5, Replac ⑫ with ⑬

6, Replace ⑤.

You should wait for about 30 minutes after fill the electrolyte, then the battery can be put into use.